



**ALL  
USED  
EQUIPMENT**

# Trailer Service Inspection

Fuel Trailer

Work Order number. MFT 100010	<b>A SERVICE – Every 6 months</b> <b>B SERVICE – Every 12 months</b>
----------------------------------	---

Unit N <sup>o</sup> : STR 241001	Hub meter reading: (if fitted)	Date: 9/12/24
----------------------------------	-----------------------------------	---------------



## WARNING

**PRIOR TO COMMENCEMENT OF WORK  
ON MACHINES, PERSON/S MUST:**

NOTE: All boxes below to be initialled by person  
(or persons) performing mechanical and lube  
services. If item not fitted mark NA in box.

- Park machine on stable, level ground and apply the parking brake
- Place wheel chocks at both front and rear wheels.
- Place 'danger' and/or 'out of service' tags in appropriate places on machines
- Isolate electrics on equipment (if fitted)

	A Service	B Service	Comments
--	-----------	-----------	----------

C  
H  
E  
C  
K

### ELECTRICAL

- All lights for correct operation ✓
- Breakaway battery condition indicator (if fitted) N/A
- Earth to chassis and return from trailer to hauling unit (if fitted) N/A
- Breakaway switch – pull pin and check proper function (if fitted) N/A
- Label noting requirement of hauling unit to have acceptable charging and warning devices (if required) N/A

### CHASSIS AND SUSPENSION

- Wheel nuts for tightness and condition ✓
- Wheel for cracks or damage ✓
- Tow hitch for wear and loose bolts ✓
- Safety chains and D shackles for correct rating, condition and damage ✓
- Broken or flattened springs ✓
- Chassis or axle housing cracks ✓
- Worn, loose or rusted fasteners and shackle link wear ✓
- Wheel bearings – ~~inspect and~~ check for damage or wear and adjust ✓
- Hub seals for damage or leaks
- Ramp pivots (if fitted) N/A
- Ramp bifold chains (if fitted) N/A
- Mudguards condition (if fitted) ✓
- Mudflaps (if fitted) ✓
- Access step (if fitted) N/A

### BRAKING SYSTEM

- Braking function and performance ✓
- Check proper adjustment and adjust as required ✓
- Hub and drum assemblies for scoring or wear
- Brake assembly internal parts for wear, leaks or damage (if fitted)
- Brake magnets for wear and replace if grooved or windings exposed (if fitted)
- Hydraulic brake system, change fluid and bleed (if fitted)
- Conduct road test to check effectiveness of braking system



**ALL  
USED  
EQUIPMENT**

## Trailer Service Inspection

<b>LUBRICATE</b>	Jockey wheel thread (if fitted)	✓		
	S cam shafts (if fitted)	NA		
	Towing king pin (if fitted)	NA		
	Spring hanger bushes (if fitted)	NA		
	All grease nipples	✓		

**TYRE PRESSURES AND CONDITION – Check and record**

Tyre Pressure	1 <sup>st</sup> Axle RHS	1 <sup>st</sup> Axle LHS	2 <sup>nd</sup> Axle RHS	2 <sup>nd</sup> Axle LHS
Actual				
Adjusted	50 PSI	50 PSI	50 PSI	50 PSI
Condition				
% Worn	50%	80%	50%	50%
Make				
Size	235/75 R15	235/75 R15	235/75 R15	235/75 R15

**SERVICE REPORT:**

REPLACE 7 PIN TRAILER PLUG ✓  
 INSTALL ALL 15 INCH RIMS ✓  
 GREASED ALL POINTS ✓

WORK CARRIED OUT BY:

Print

Name: Match

Signed: [Signature]

Date: 9/12/24

CHECKED AND RECORDED BY:

Print Name: John Stonehouse

Signed: [Signature]

Date: 9/12/24